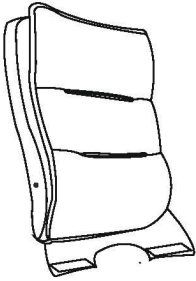
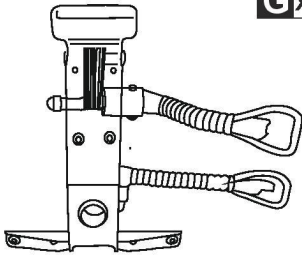









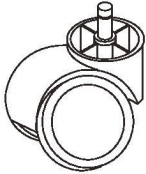

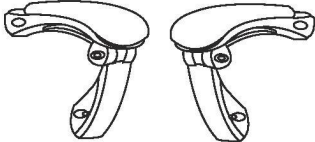



NÁVOD NA MONTÁŽ KA-Y350

 <p>A x 1</p>	 <p>G x 1</p>	 <p>104 x 4</p> <p>M8*40</p>
 <p>B x 1</p>	 <p>H x 1</p>	 <p>105 x 1</p> <p>M6</p>
 <p>C x 1</p>	 <p>I x 1</p>	 <p>106 x 4</p> <p>φ15</p>
 <p>D x 1</p>	 <p>101 x 4</p> <p>M6*20</p>	
 <p>E x 5</p>	 <p>102 x 4</p> <p>M6*25</p>	
 <p>F x 2</p> <p>M8*20</p>	 <p>103 x 4</p>	

