


# KORA






## Komoda rohová KKN1

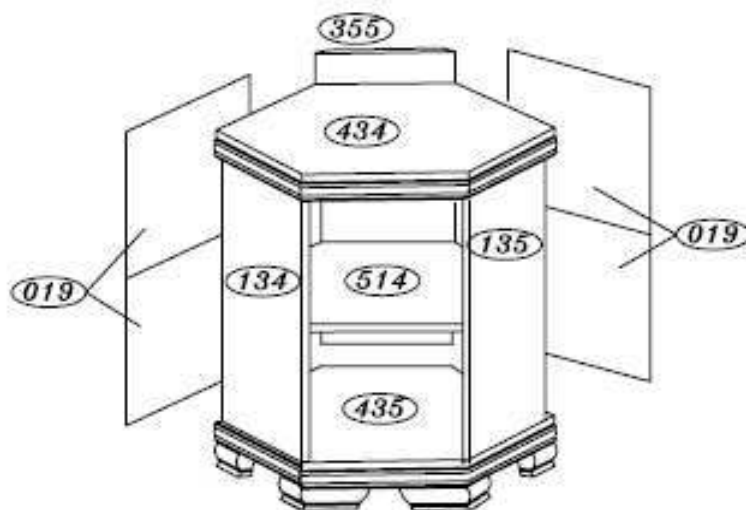







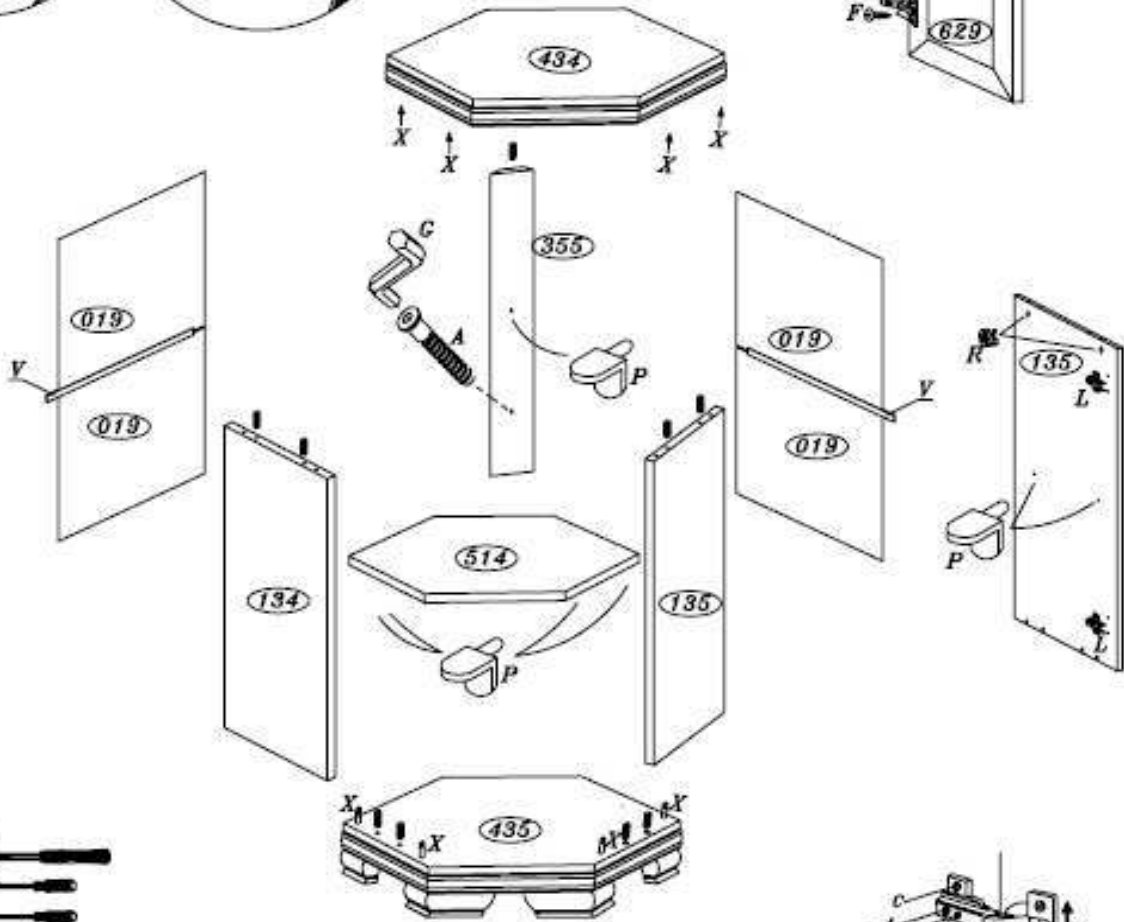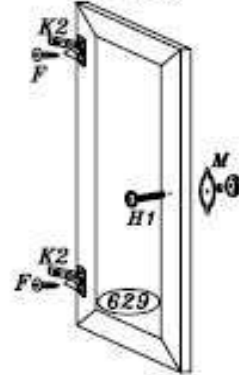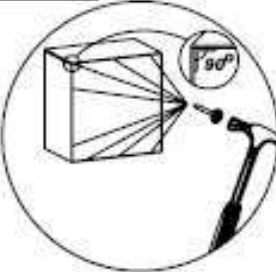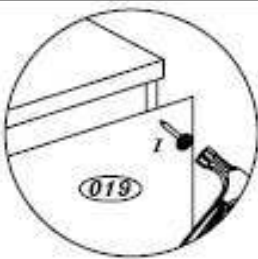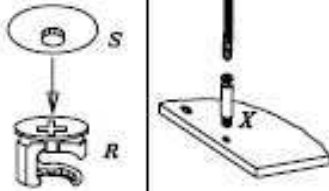










### Upozornenie !

Pred montážou si prosím dôkladne preštudujte montážny návod.  
Poškodenia vzniknuté nesprávnou montážou nebudú uznané v reklama nom konaní.

**KKN1**



.	Kód	Ks	Balík
1	434	1	2
2	435	1	2
3	134	1	1
4	135	1	1
5	514	1	2
6	019	4	2
7	629	1	1
8	355	1	2

							
1 ks A	1 ks B	1 ks G					
M 4.0x37		3.5x15					
							
1 ks H1	9 ks C	4 ks F	1 ks G	30 ks I	2 ks K2		
							
1 ks M	1 ks O	5 ks P	8 ks R	8 ks S	2 ks V	2 ks L	8 ks X

