



SK NÁVOD NA MONTÁŽ
 CZ MONTÁŽNÍ NÁVOD
 HU SZERELÉSI UTASÍTÁS
 DE MONTAGEANLEITUNG

DORISA

	1100	mm
	450	
	600	

	 60 min		 PZ2		 3m	 600 mm
--	------------	--	---------	--	--------	------------



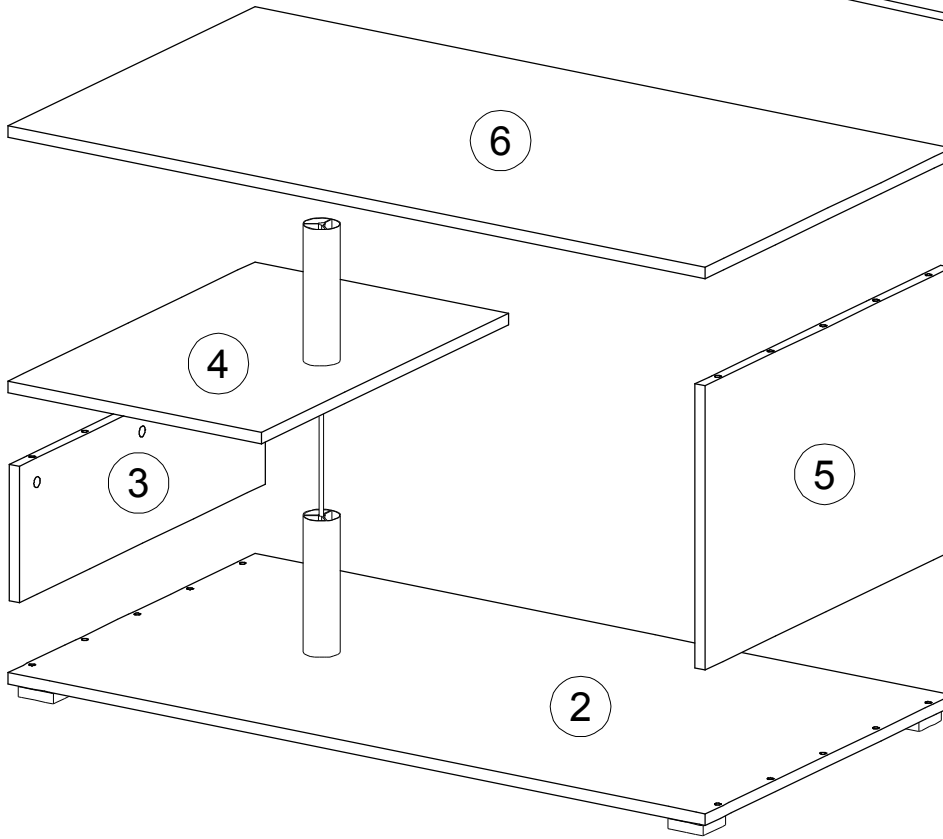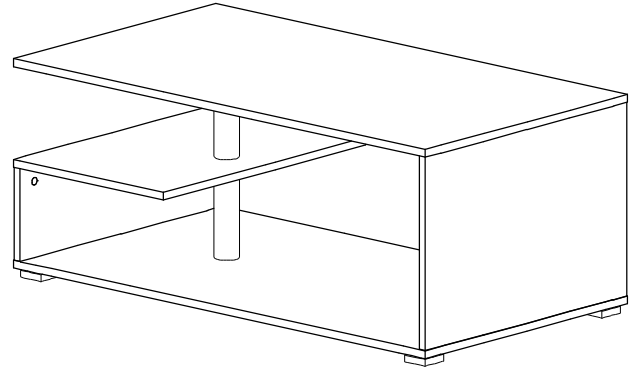

10580	②	1100*600*16	1x	1/1
10581	③	190*598*16	1x	1/1
10582	④	400*600*16	1x	1/1
10583	⑤	396*598*16	1x	1/1
10584	⑥	1100*600*16	1x	1/1








27000,00 Ø8x30		22060,00 Ø4x30	70013,01 	70021,01 	22300,00 Ø7x50	 4	24091,00 Ø10x11	22601,00 	30083,00 55x55x20
A 8x	B 6x	C 20x	D 6x	E 6x	F 6x	G 1x	H 1x	J 1x	K 5x
60028,04 	25301,00 								
L 2x	M 1x								








✓	✗	✓	✗	✓	✗	✓	✗	✓	✗





 Ø8x30	 6x	 6x	 Ø10x11
A 8x	D 6x	E 6x	H 1x

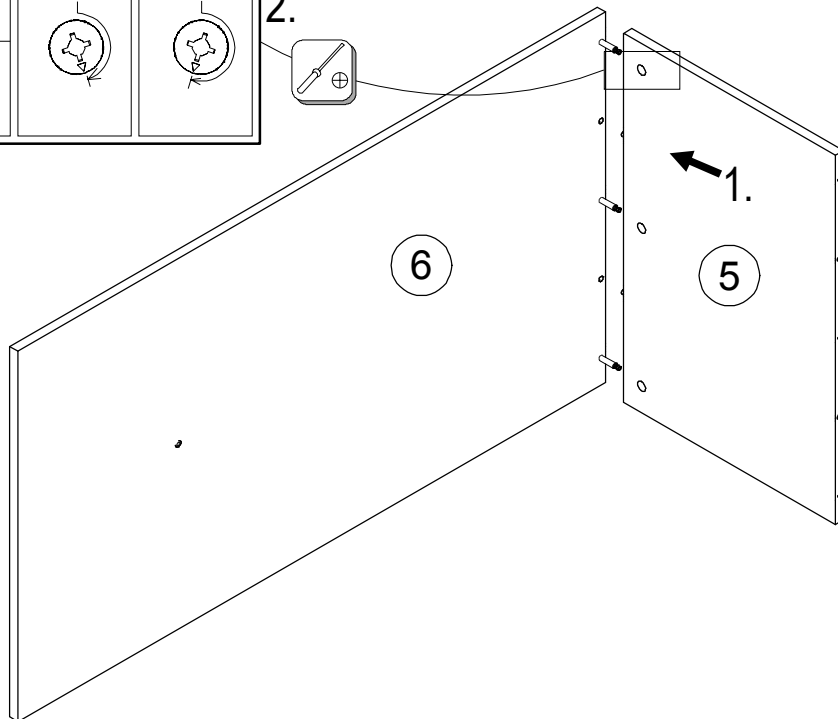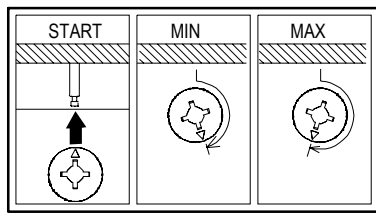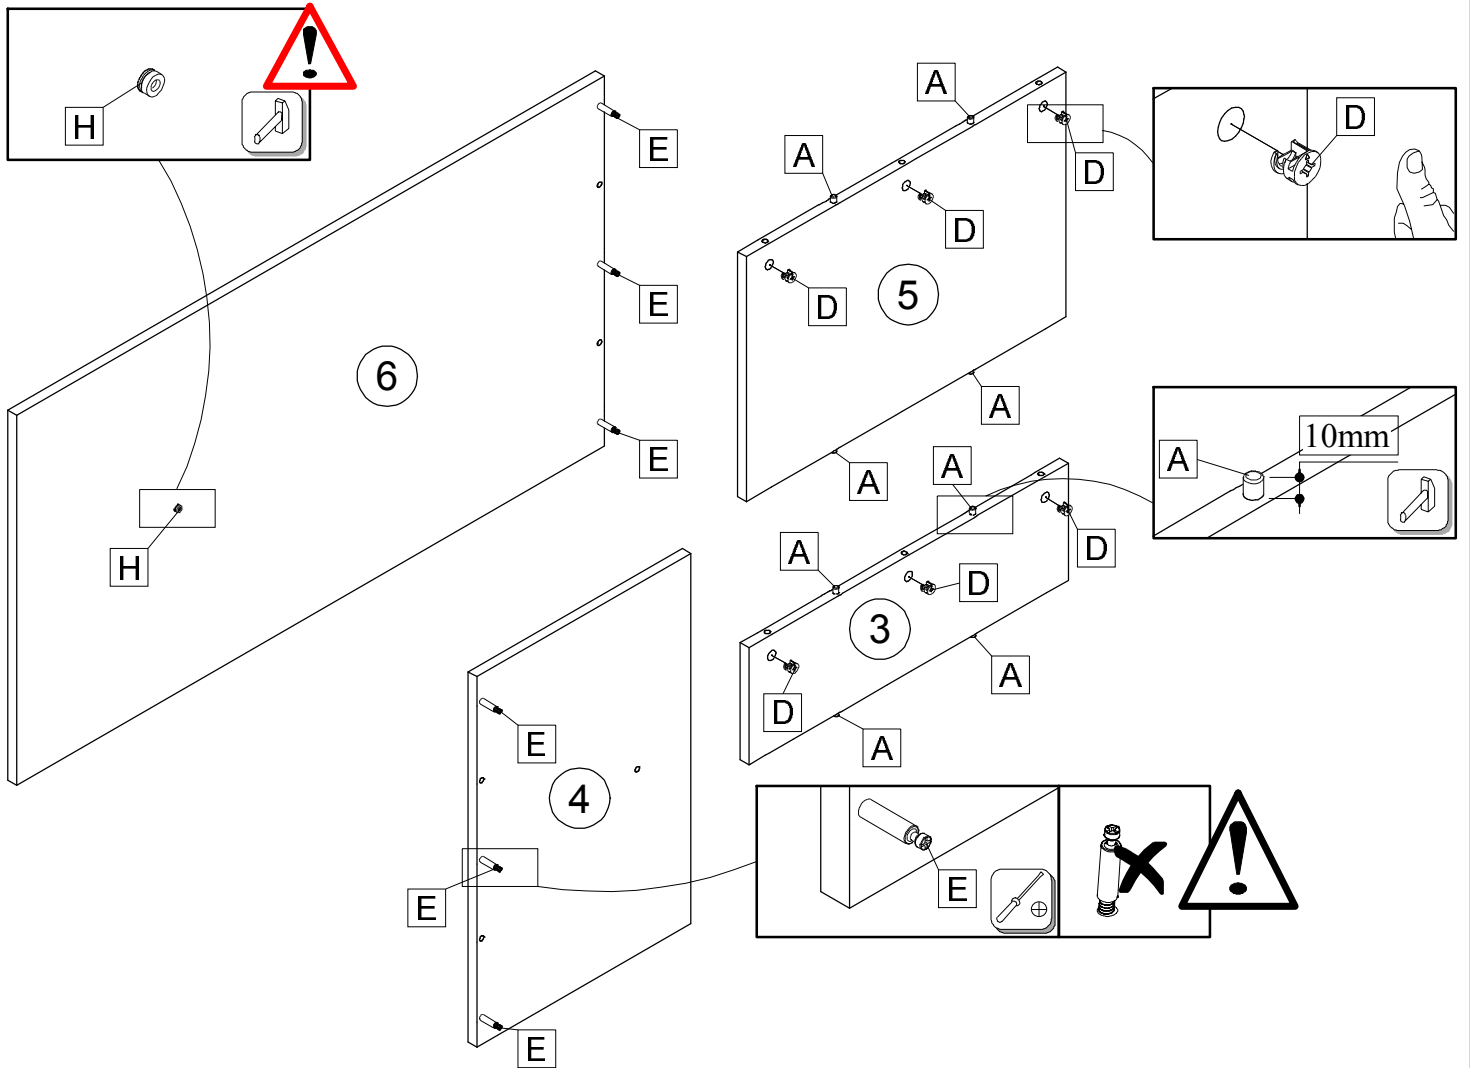



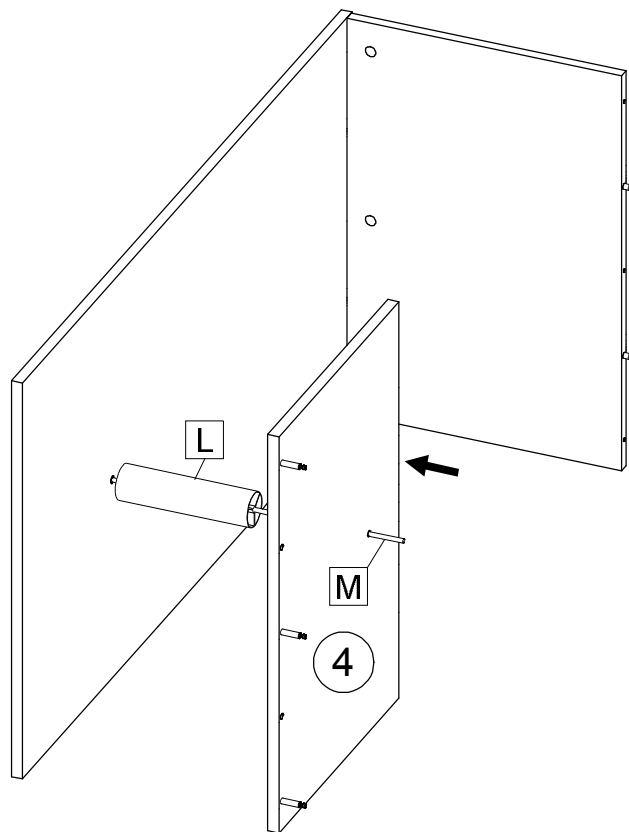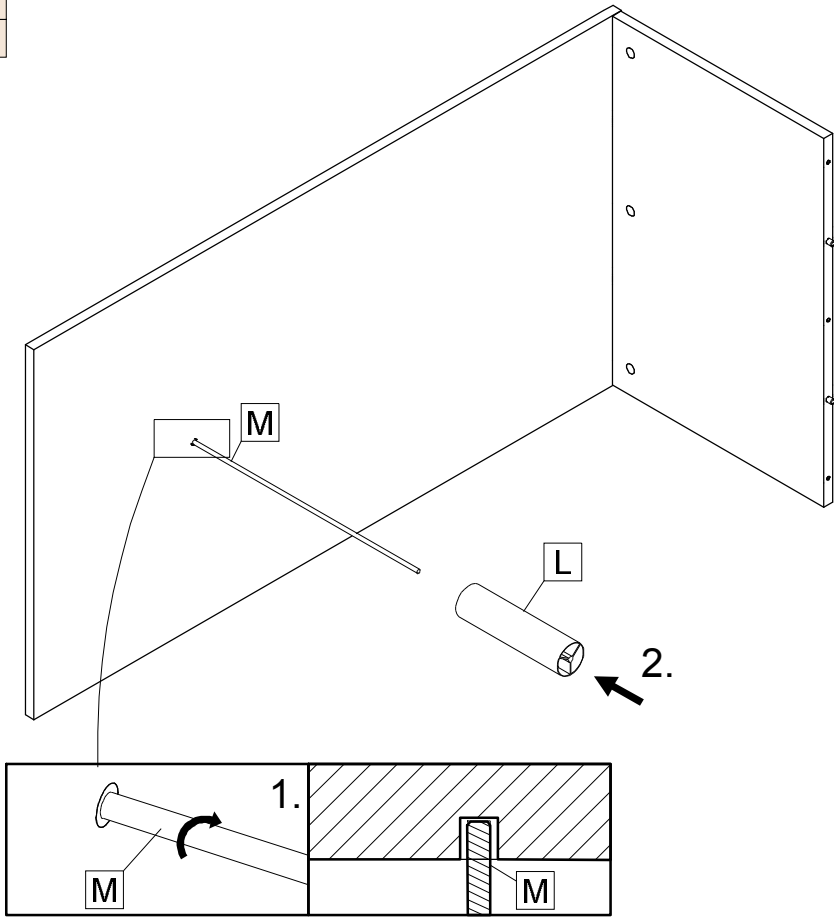
			
L	1x	M	1x

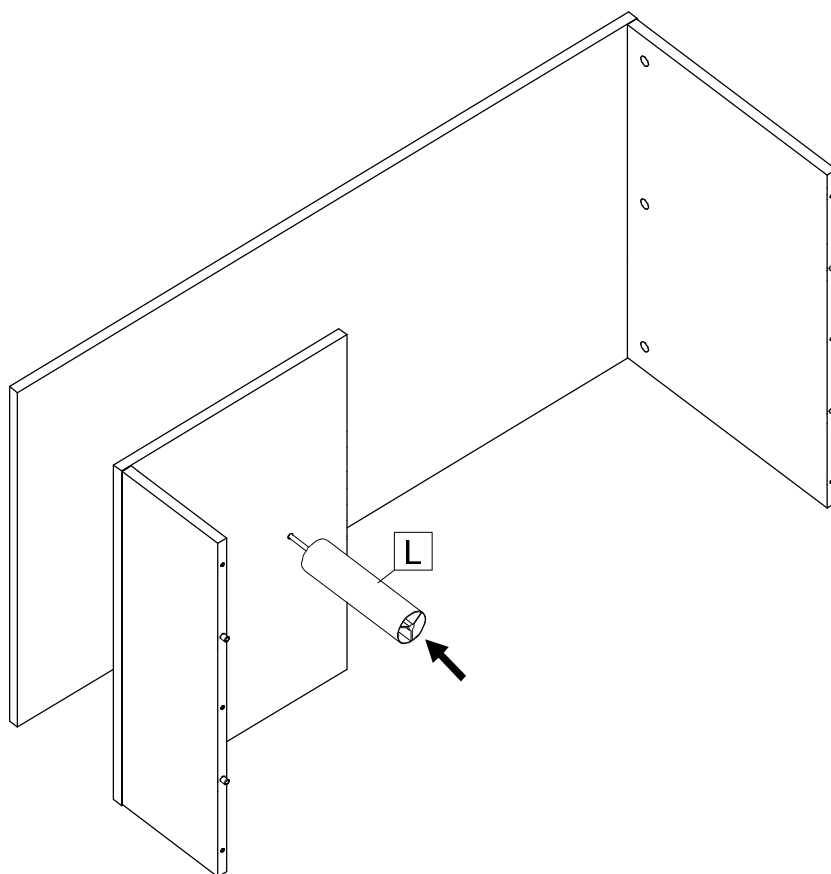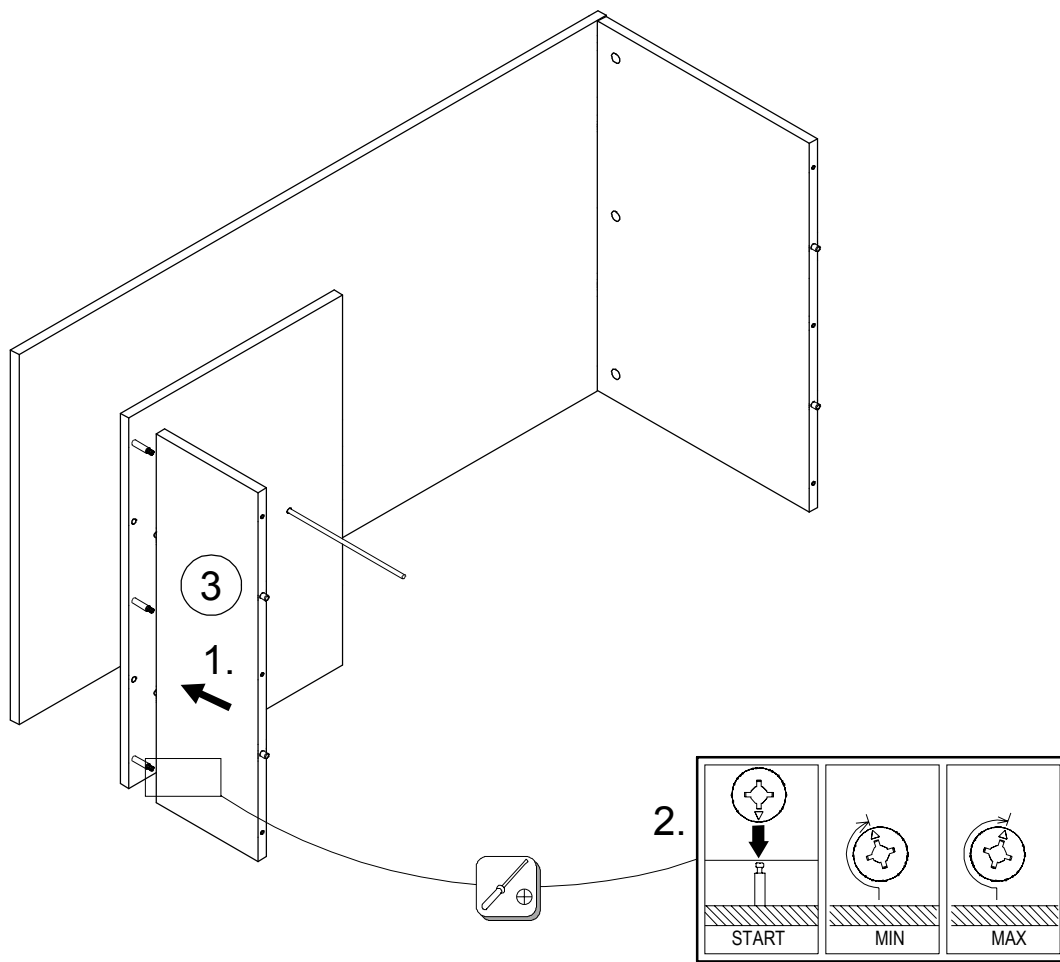

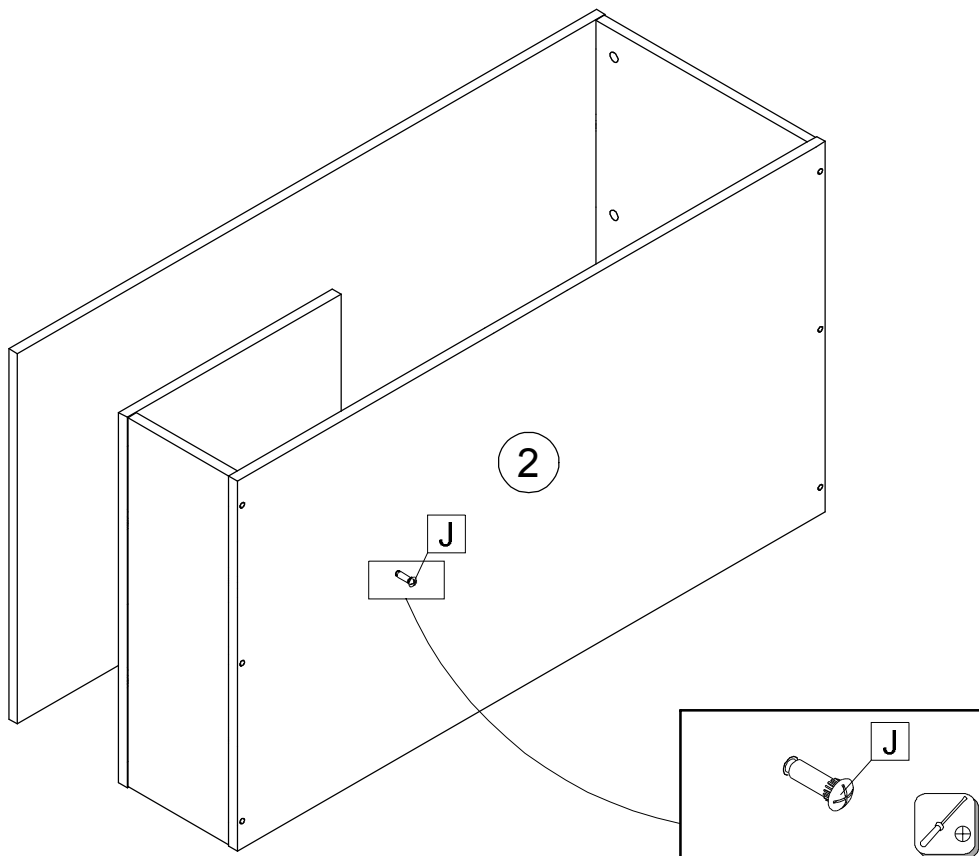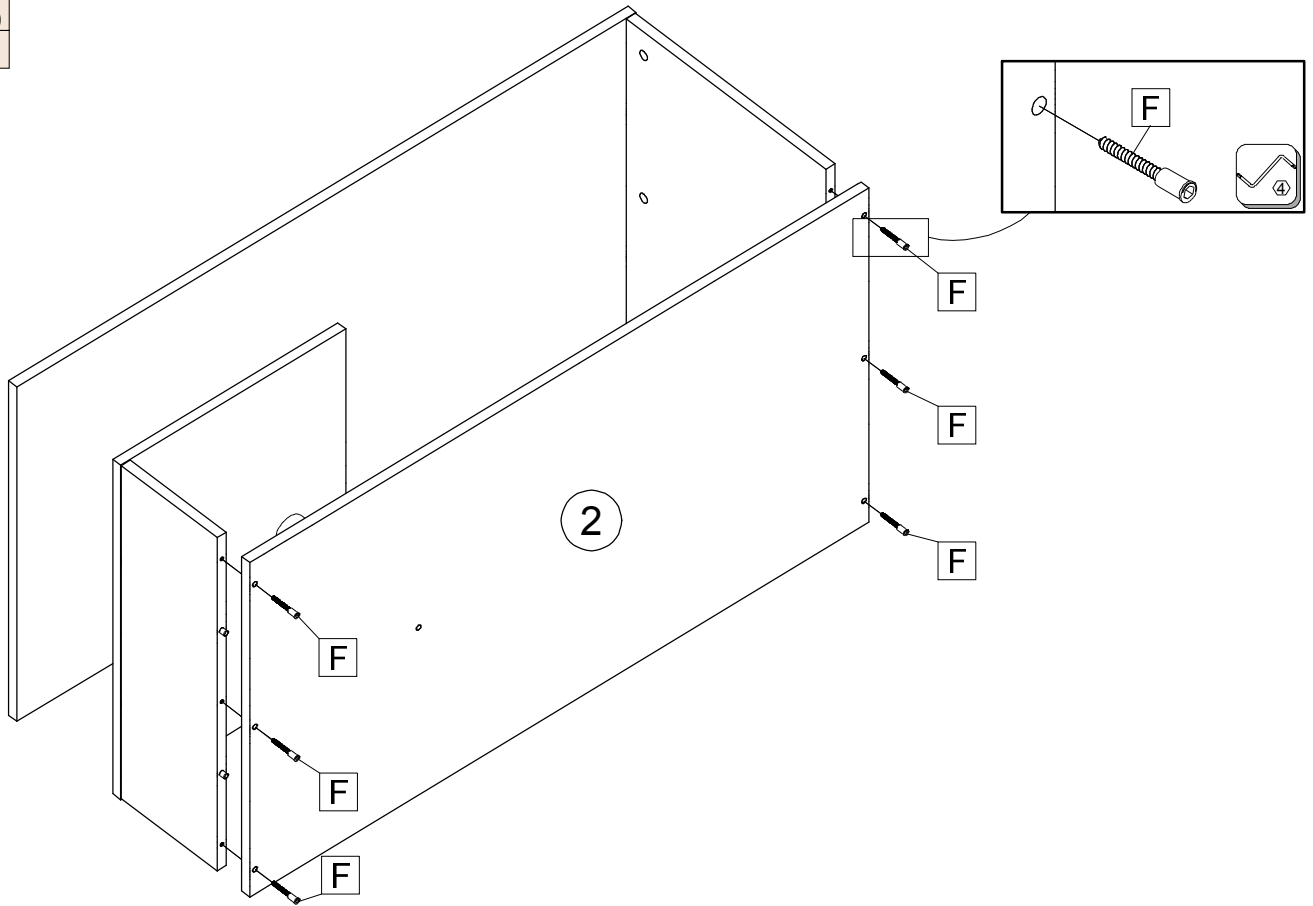




	
Ø4x30	55x55x20
C 20x	K 5x

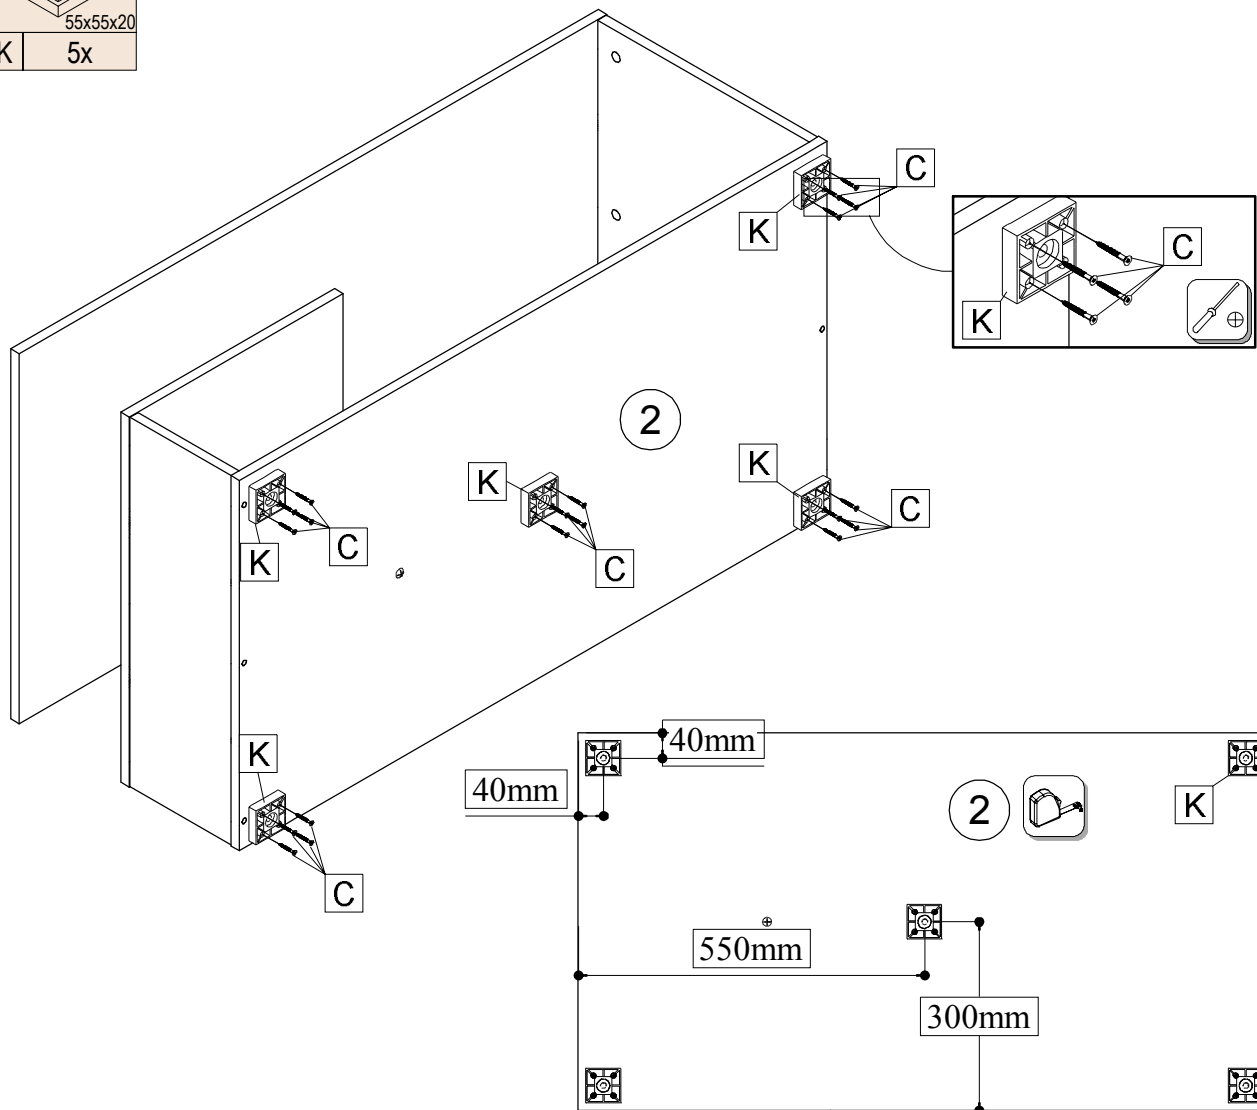


B 6x

